
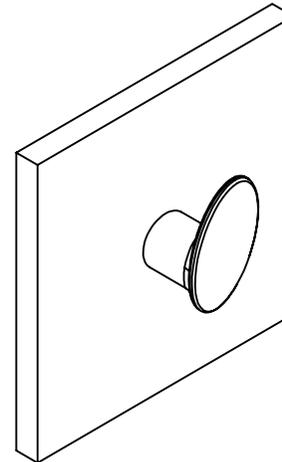


01: MARK OUT HOLE POSITION:

01a: FITTING INTO PLASTER BOARD, USE A RAWL PLUG.
01b: FITTING INTO WOOD, DRILL A PILOT HOLE.

02: FIT THE FIXING INSERT ENSURING
THE FLAT SIDE IS HORIZONTAL.


03: FIT GARMENT HOOK OVER THE FIXING INSERT.

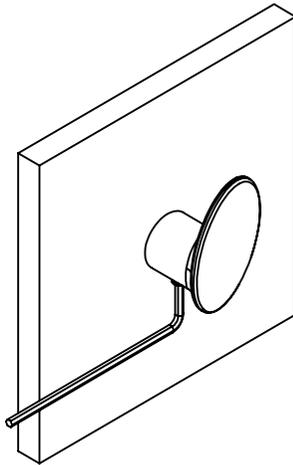

04: USING SUPPLIED GRUB SCREW ASSEMBLE THE HOOK TO THE FIXING INSERT.

05: REPEAT STEPS FOR ALL OTHER GARMENT HOOKS.

PACK CONTENTS

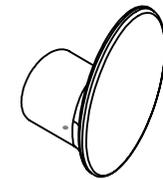

1x GARMENT HOOK



1x FIXING INSERT



1x WOOD SCREW



1x GRUB SCREW