





01: SET OUT FIRST BRACKET POSITION, MARK CENTERS AND DRILL A PILOT HOLE FOR FIXINGS

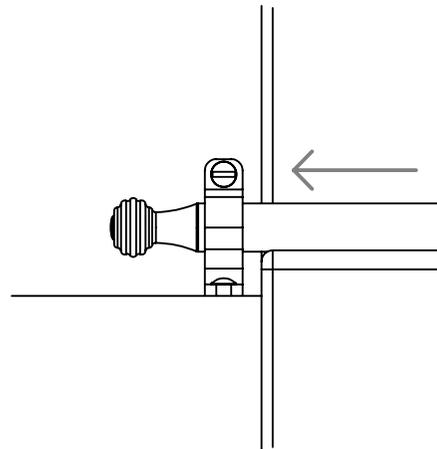

02: SECURE FIRST BRACKET USING SUPPLIED WOOD SCREWS AND SLIDE STAIR ROD INTO THE BRACKET AS SHOWN

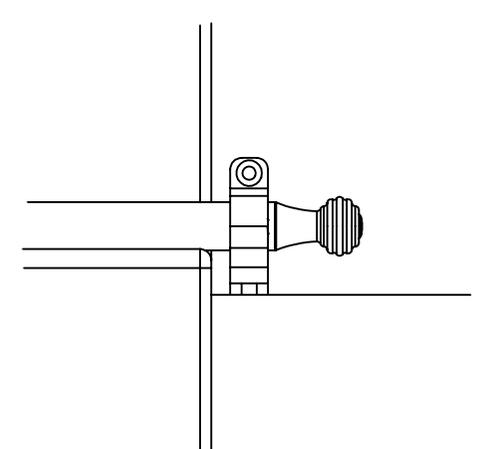

03: SET OUT CORRESPONDING BRACKET POSITION, MARK CENTERS AND DRILL A PILOT HOLE FOR FIXINGS

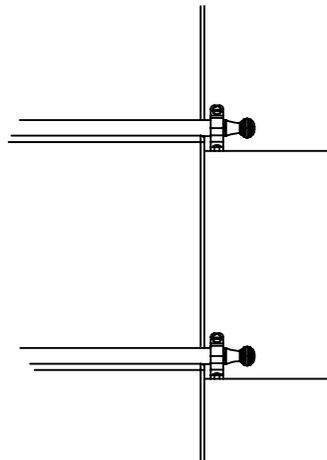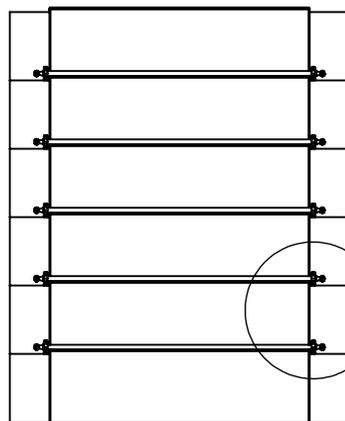


04: REPEAT STEPS 1-3 CHECKING EVERY OTHER STEP FOR ALIGNMENT AS YOU WORK UP.
 NOTE: RODS HAVE SOME ADJUSTMENT WITHIN BRACKETS TO HELP MAINTAIN ALIGNMENT

PACK CONTENTS (QUANTITY PER STEP)



2x BRACKET AND FINIAL
 (COMES PRE ASSEMBLED)

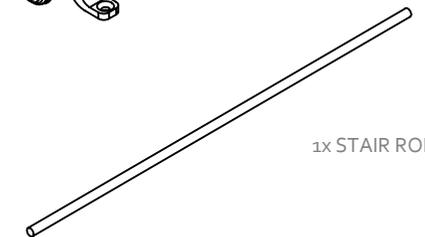

1x STAIR ROD



4x WOOD SCREW